

How to retrieve the password for wireless connection?

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

Application:

Password can ensure your security of your wireless network. Follow these steps if you forgot about it.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.1.1 into the address bar of your browser.




Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is **admin**).

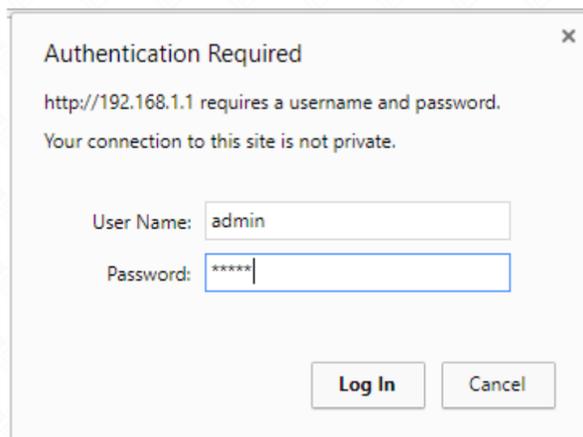

STEP-2:

Click **Advanced Setup->Wireless->Wireless Setup** on the navigation bar on the left .

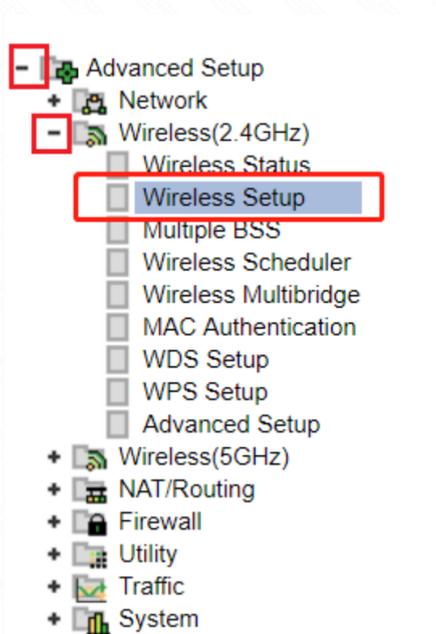

STEP-3:

You will see the password in this interface and also you can change it or disable encryption here.

