

# How to setup N200RE V3 Multi-SSID?

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT , N300RH, N302R Plus, A702R, A850, A3002RU**

**Application introduction:** IP conflict may happen while there are two routers in series connection or other reasons, which may cause false connection. Change LAN IP by follow steps can help you avoid of IP conflict.

**STEP-1:**

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



**Note:**

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

**STEP-2:**

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

## USER LOGIN

Forget Password?

User Name

Password

**STEP-3:**

Click **Network->LAN Settings** on the navigation bar on the left. In this interface you can change the IP address (e.g. 192.168.2.1), and click Apply button for saving settings.

- Status
- Operation Mode
- Network** 1
- WAN Settings
- LAN Settings 2
- IPTV Settings
- DHCP&ARP Tables
- Static Route
- Routing Table
- IPv6 Network +
- Wireless 5GHz +
- Wireless 2.4GHz +
- QoS
- Firewall +
- USB Share

### LAN Settings

---

IP Address

Subnet Mask

DNS:

DHCP

DHCP Client Range

DHCP Lease Time

Static DHCP

Domain Name

802.1d Spanning Tree

For IP Routing

Second IP Address

Second Subnet Mask

3

LAN-side router IP ▾

Server ▾ 4

-

(1 ~ 10080 minutes)

Disabled ▾

Disabled  Enabled

5 Refresh