

How to change or hide the SSID?

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

Application introduction: If you want to alter the SSID of the router, please follow the steps below.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering <http://192.168.0.1> into the address bar of your browser.



Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

Forget Password?

👤

User Name

🔑

Password

LOGIN

STEP-3:

Click **Wireless->Basic Settings** on the navigation bar on the left. To change the SSID, you can input the new SSID to replace the original SSID. If you want to hide the SSID, choose "Disable" in the SSID broadcast bar. Then click "Apply" in the lower right corner.

- Status
- Operation Mode
- Network +
- IPv6 Network +
- Wireless 5GHz +
- Wireless 2.4GHz -
- Basic Settings 1
- Multiple SSID 1
- Multiple SSID 2
- Multiple SSID 3
- Multiple SSID 4
- Advanced Settings
- WDS Settings
- Access Control
- WPS Settings
- Wireless Schedule
- QoS
- Firewall +
- USB Share
- System +

Basic Settings

Basic Settings Enabled ▾

SSID

Broadcast SSID Enabled ▾ 3

Encryption WPA2 ▾

Limit Client AP(3-64)

Download: Mbps (0:Unlimit)

Upload: Mbps (0:Unlimit)

Authentication Mode
 Enterprise (RADIUS) Personal (Pre-Shared Key)

WPA2 Cipher Suite
 TKIP AES

Pre-Shared Key Format Passphrase ▾

Pre-Shared Key

Apply 4

Choose "Disable" is to hide the SSID