

 
How do I disable SSID broadcast?

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

Application introduction: In order to improve network security, you can disable SSID broadcast in the web-configuration interface. After disabled SSID broadcast, other devices can find and connect to the SSID again.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

Now you have logged into the web interface of the router.

STEP-3: Disabled SSID broadcast

Click **Wireless-> Basic Settings**. On this page, you could change the SSID Broadcast status.

Basic Settings

Basic Settings: Enabled

SSID: TOTOLINK N200RE

Broadcast SSID: Disabled

Encryption: WPA2

Limit Client AP(3-64): 32

Download: 0 Mbps (0:Unlimit)

Upload: 0 Mbps (0:Unlimit)

Authentication Mode: Enterprise (RADIUS) Personal (Pre-Shared Key)

WPA2 Cipher Suite: TKIP AES

Pre-Shared Key Format: Passphrase

Pre-Shared Key: 88888888

Apply