

How to get back the WiFi password?

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

Application introduction: Password can ensure the security of your wireless network. In case you forget the Password, follow steps below to restore it.

Take N200RE-V3 as an example.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN


Forget Password?

ⓘ
User Name

🔑
Password


STEP-3: Disabled SSID broadcast

First, the **Easy Setup** page will turn up for basic and quick settings, click **Advanced Setup**.

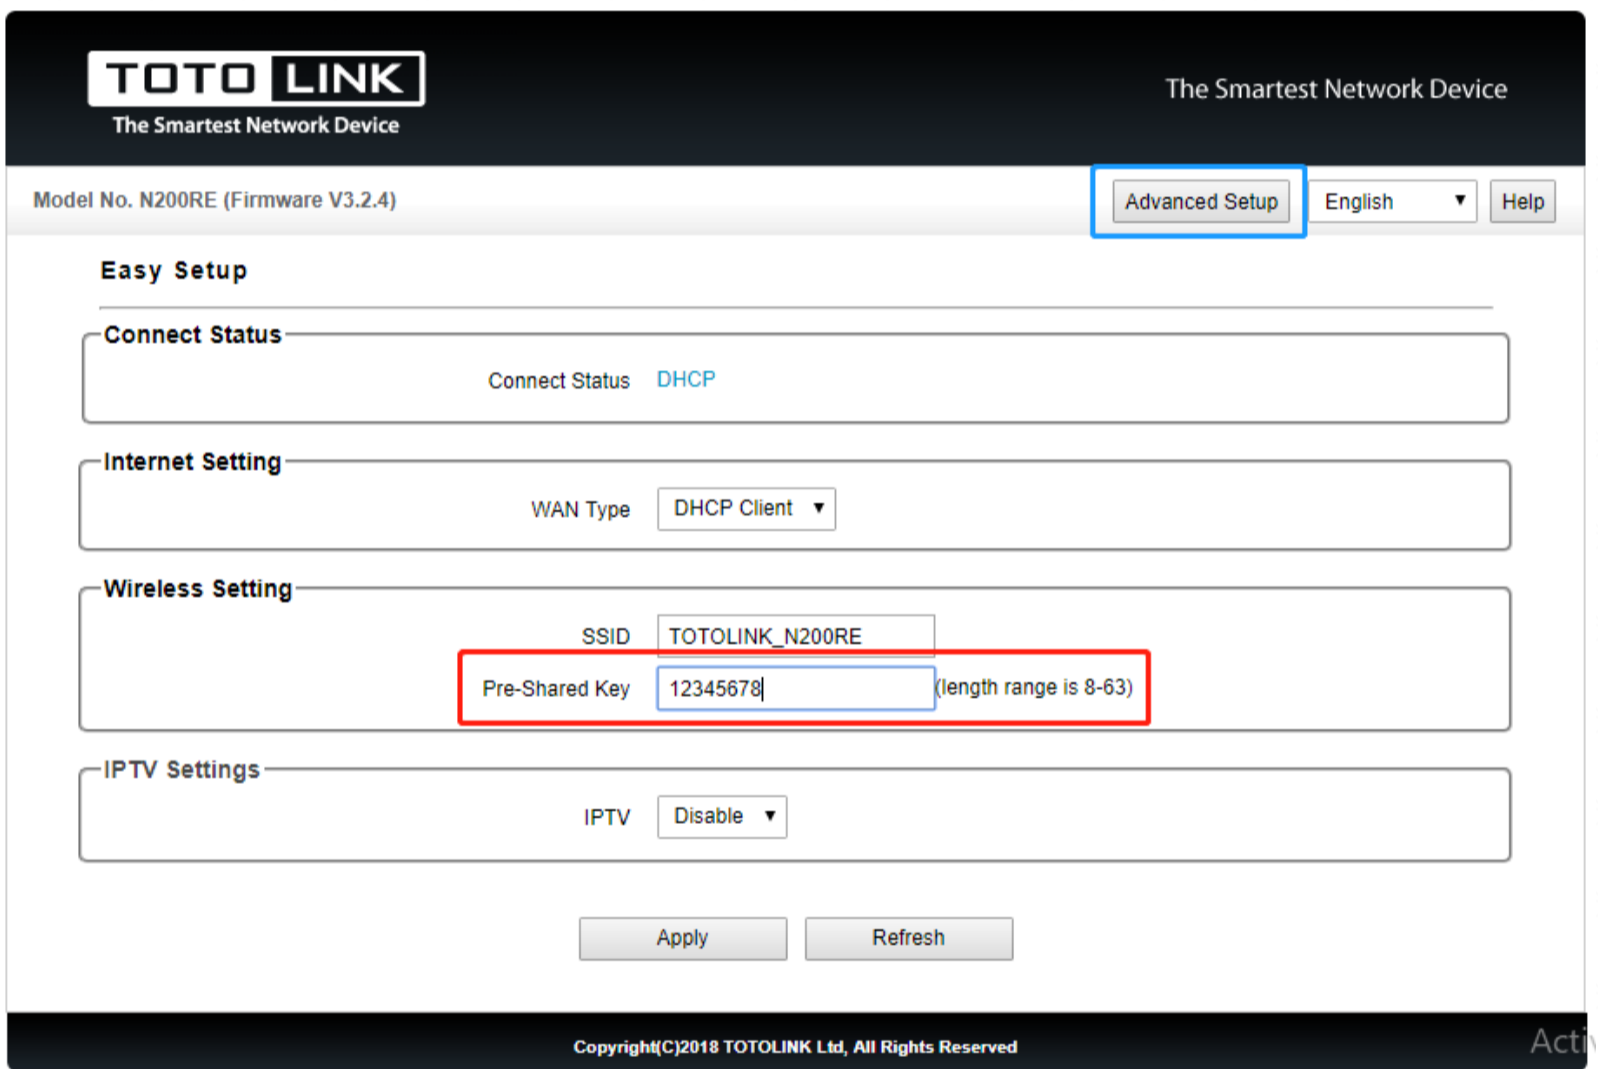

STEP-4:

Click **Wireless Setting->Basic Settings** on the left navigation bar.

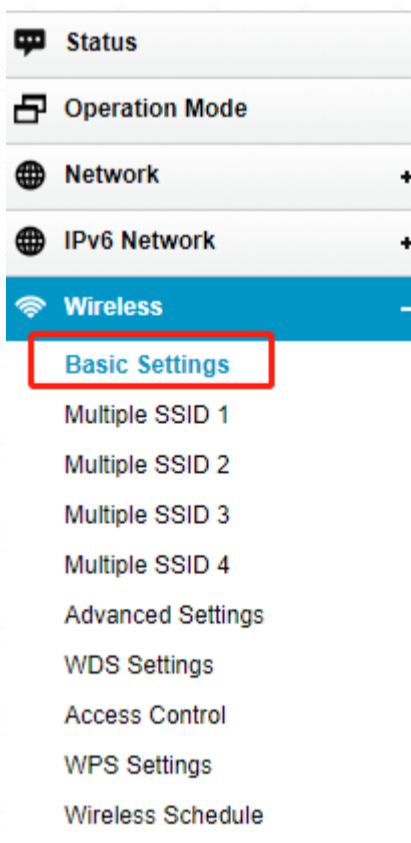

STEP-5:

You can check the password on this page directly.

Basic Settings

Basic Settings	Enabled ▾
SSID	TOTOLINK_N200RE
Broadcast SSID	Enabled ▾
Encryption	WPA2 ▾
Limit Client AP(1-32)	32
Download:	0 Mbps (0:Unlimit)
Upload:	0 Mbps (0:Unlimit)
Authentication Mode	<input type="radio"/> Enterprise (RADIUS) <input checked="" type="radio"/> Personal (Pre-Shar
WPA2 Cipher Suite	<input type="checkbox"/> TKIP <input checked="" type="checkbox"/> AES
Pre-Shared Key Format	Passphrase ▾
Pre-Shared Key	12345678