

A3002RU Change the WIFI password setting

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT , N300RH, N302R Plus, A702R, A850, A3002RU**

Application introduction: Solution about how to change the wireless name and password on the TOTOLINK products

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

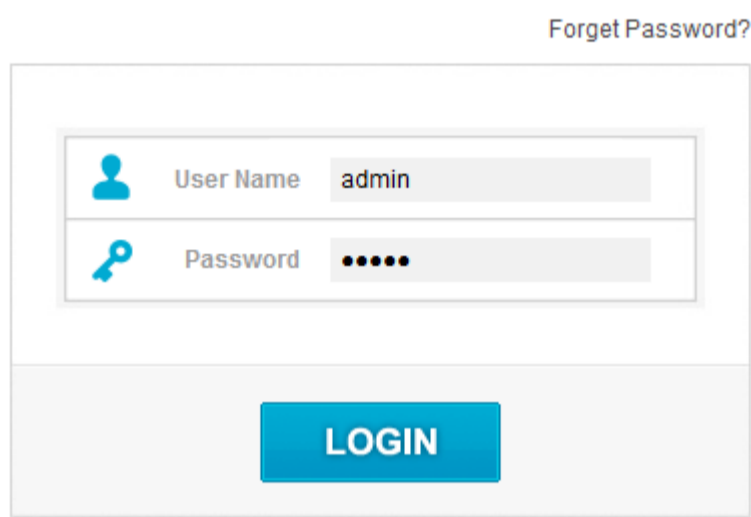

STEP-3: Modify in Easy Setup page

The Easy Setup page will turn up for basic and quick setting, Input your own **Wireless Network Name and Password**, then Click **Apply**.

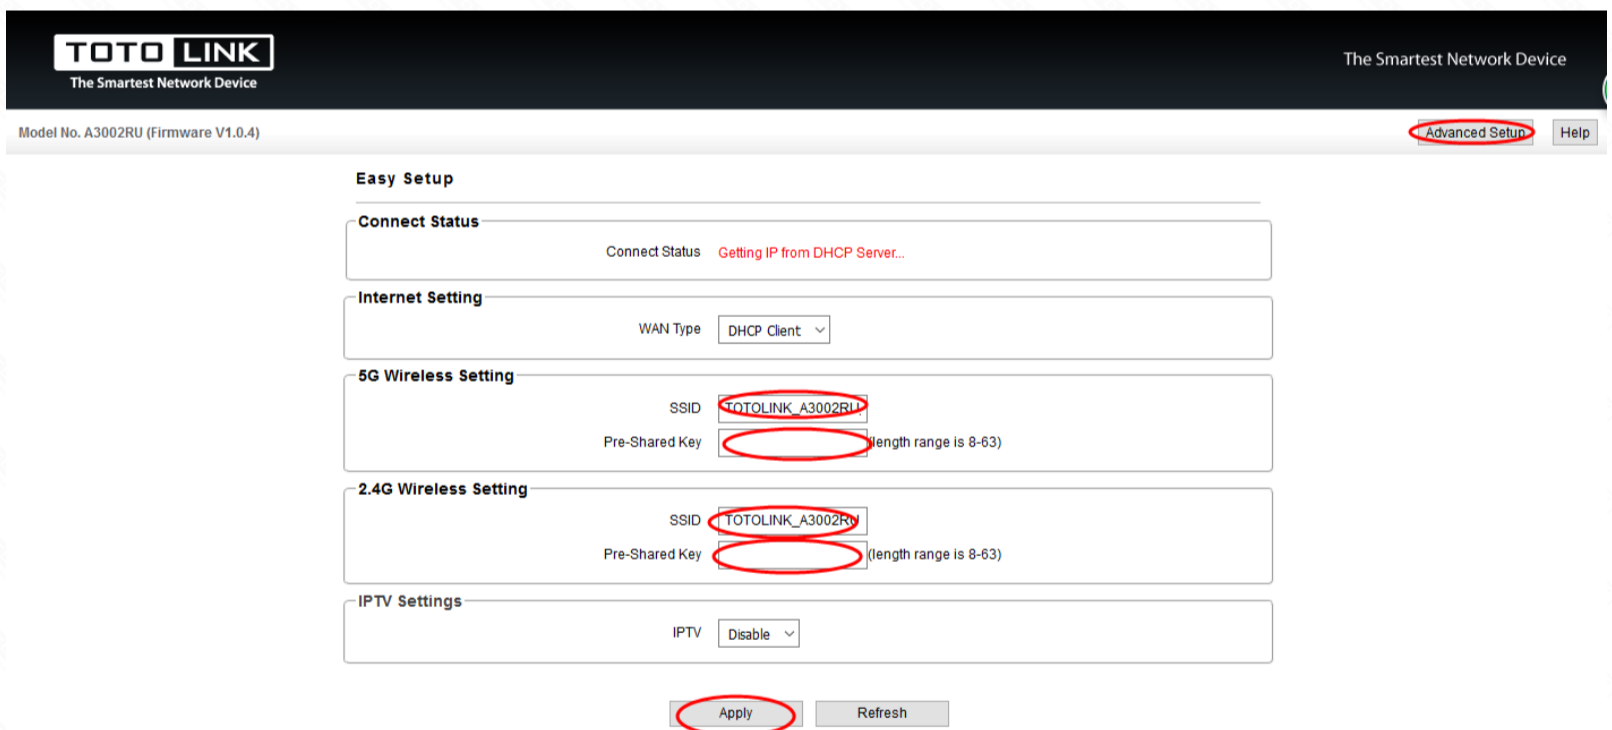

STEP-4: Modify In the Advanced Setup

Please go to **Wireless ->Basic Setting** page, and check which you have select. Select **WPA-PSK/WPA2-PSK**, then Input your own **Wireless Network Name and Password**, then Click **Apply**.

