

N600R Reset settings

It is suitable for : **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction:

Solution about how to reset TOTOLINK products to factory defaults.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering <http://192.168.0.1> into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)


User Name

Password

STEP-3: Login page reset

Please go to **Management->System Configuration** page, and check which you have selected.

Select **Restore**.

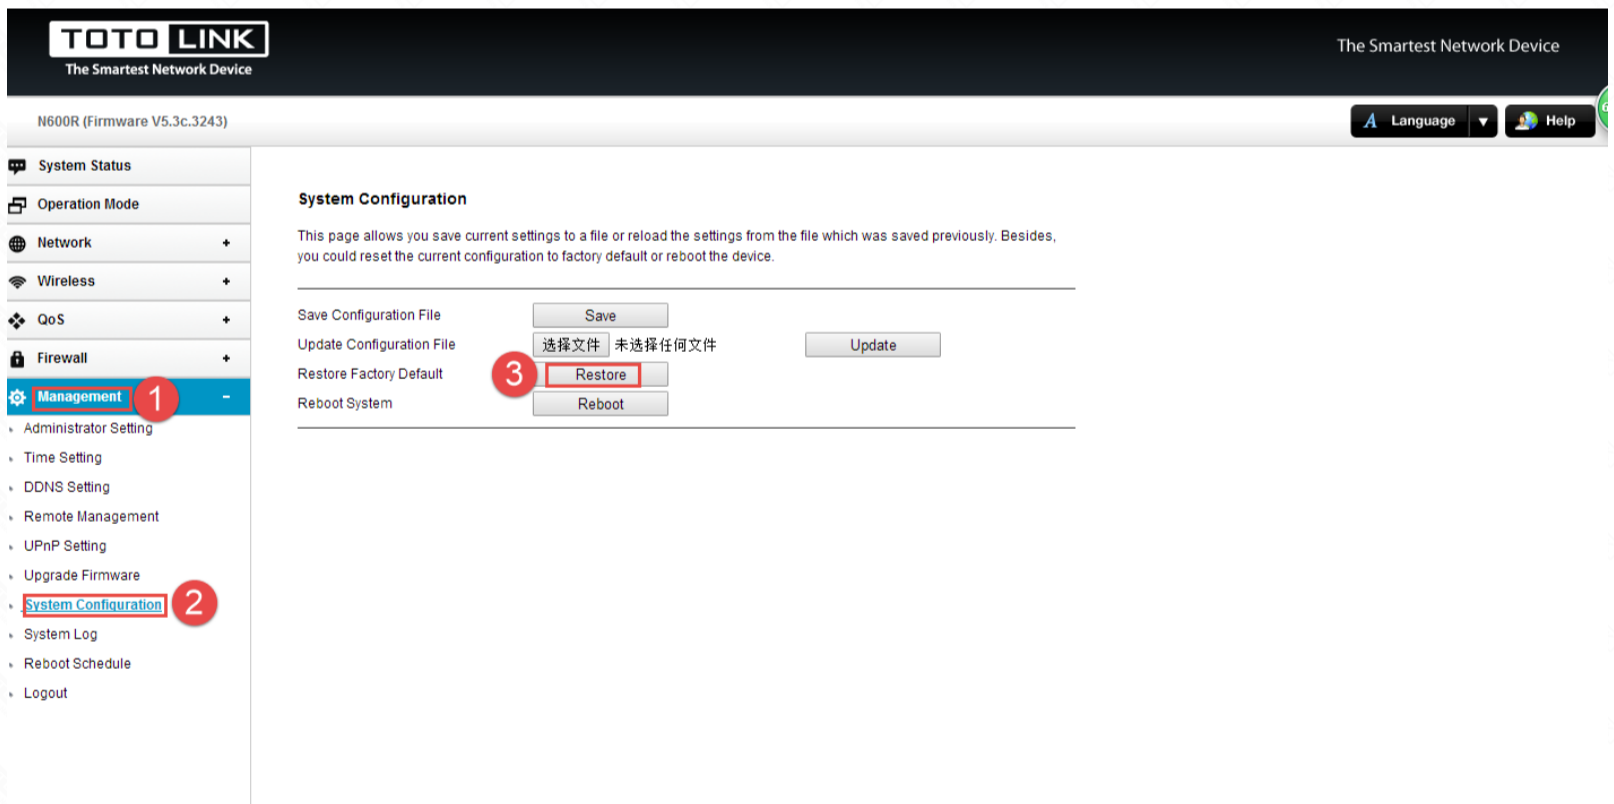

STEP-4: RST Button reset

Please make sure your router's power is on regularly, then press the RST button for about 5~8s.

Loosen the button until your router's LED lights all flashing, then you have reset your router to default settings.

