

How to change the login password?

It is suitable for : **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction:

If you want to reset the router's User Name and Password, please follow the steps below.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

STEP-3:

Click **Management->Administrator Setting** on the navigation bar on the left. In this interface, you can change the password after entering the old password. The default user name and password is admin.