

How to check the current gateway IP address

It is suitable for: **All TOTOLINK router**

Application:

This article describes the Windows operating system computer connected to the router (or other network device) by wireless or wired, view the gateway IP address of the current router.

Method One


For Windows W10:

STEP-1.

TOTOLINK Router LAN Port Connects the PC Or wirelessly connect to TOTOLINK Router WIFI.


STEP-2.

Right-click the Network Connections icon, click on "Network & Internet settings".

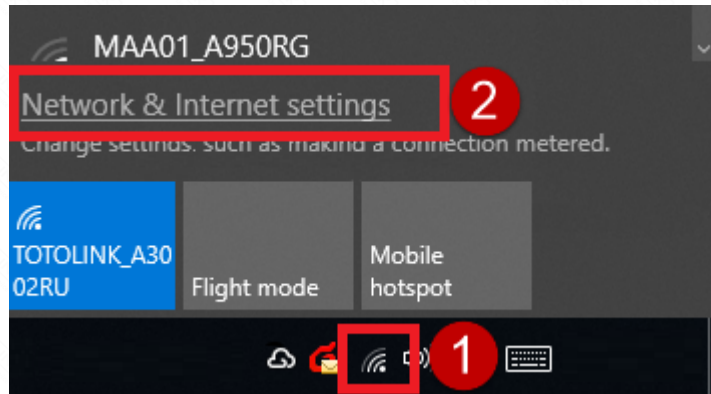


STEP-3.

Pop up the Network & Internet Center interface, click on "Network and Sharing Centre" under Related settings.

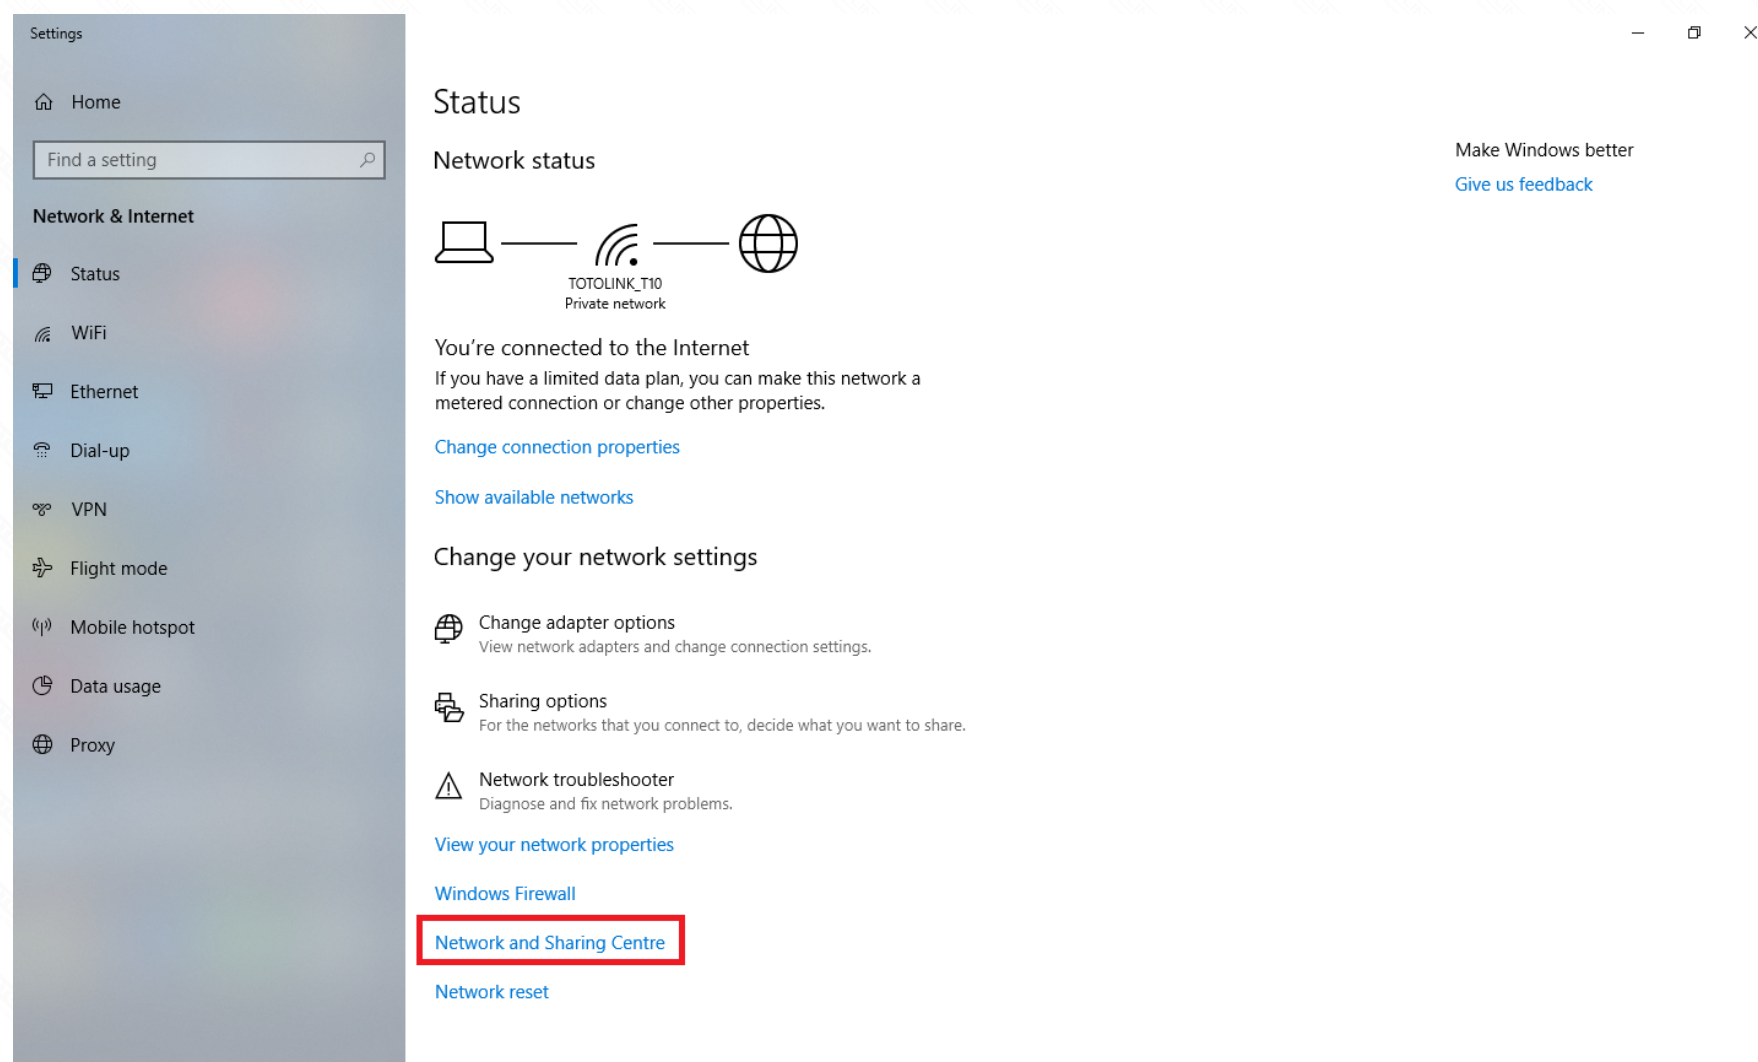


STEP-4.

Click connections target

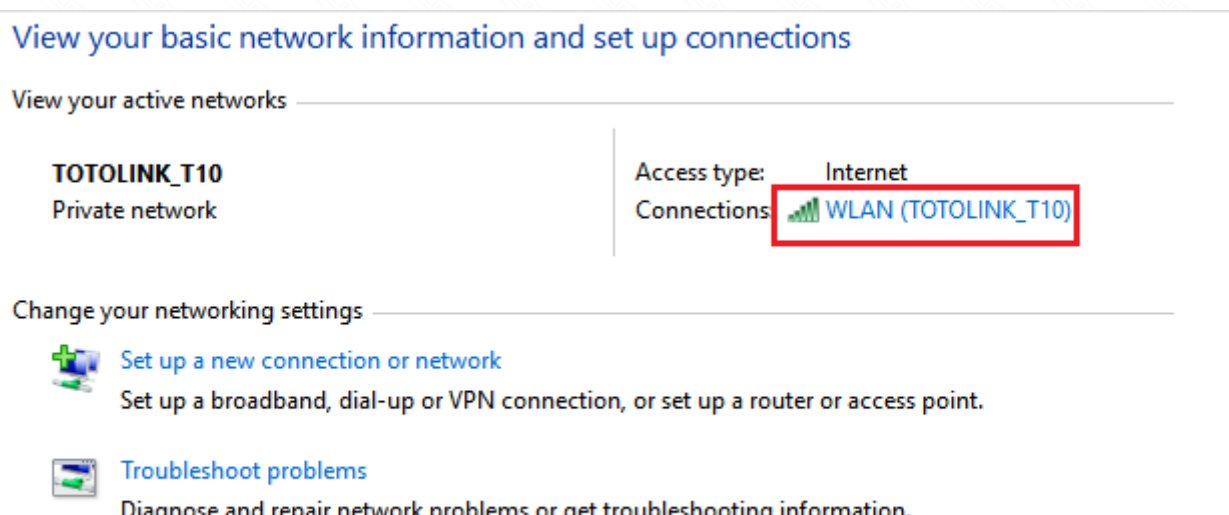


STEP-5.

Click Details...

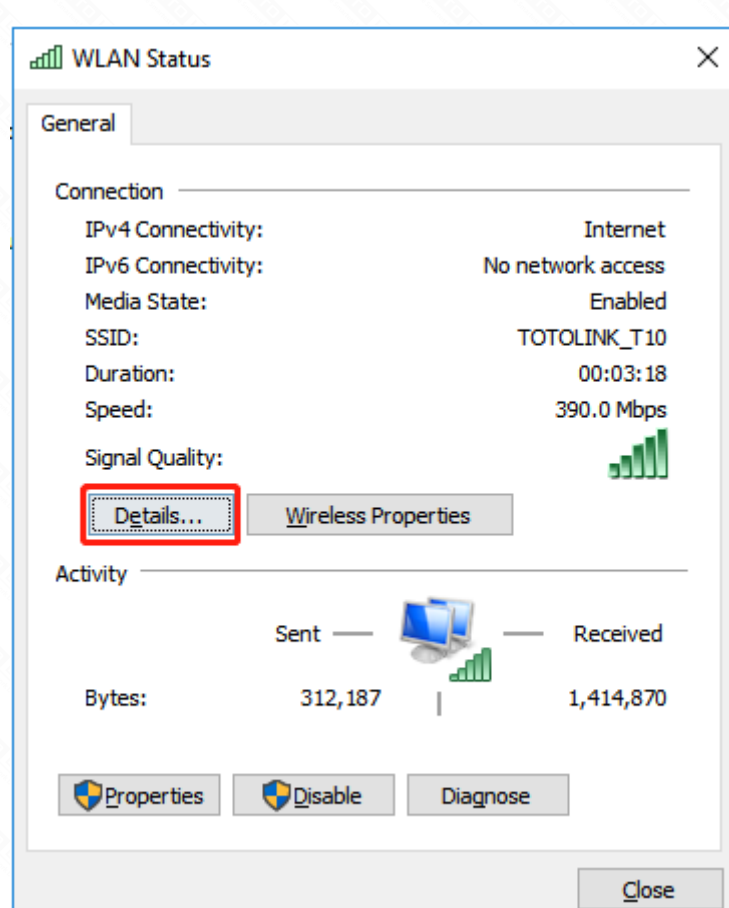

STEP-6.

Find to IPv4 Default Gateway, This is the current gateway address of your router.

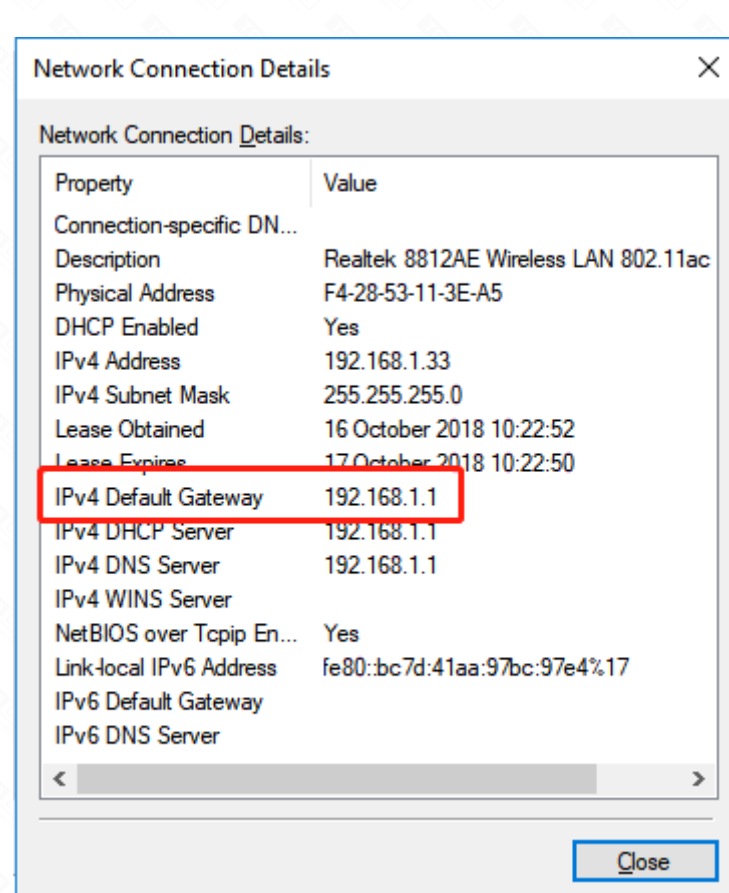

Method Two

For Windows 7, 8, 8.1 and 10:

STEP-1.


Click on **windows key+ R key** on the keyboard at the same time.



'R'

STEP-2.

Enter **cmd** in the field and click OK button.

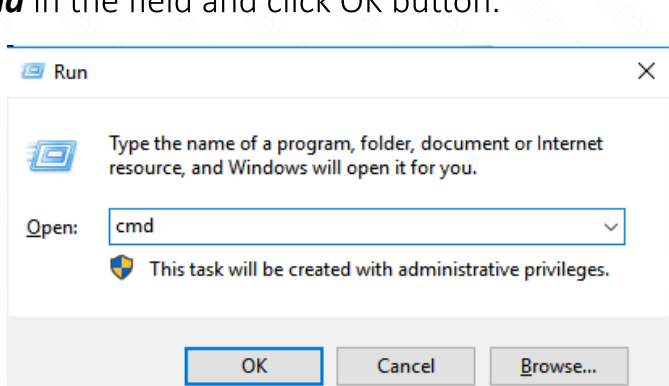

STEP-3.

Type in **ipconfig** and click enter key. Find to IPv4 Default Gateway, This is the current gateway address of your router.

