

How to manually set an IP address?

It is suitable for : All TOTOLINK routers

Application introduction:

This article will illustrate way to manually set an IP address on Windows 10/Mobile phone.

Manually set IP address on Windows 10



1-1. Find the small computer icon in the lower right corner of your computer deskto



, click on "Network & Internet settings".



1-2. Pop up the Network & Internet Center interface, click on "Change adapter options" under Related settings.

ŵ Home

Find a setting

Network & Internet

- Status
- WiFi (h
- Ethernet 臣
- 9 Dial-up
- VPN °%
- ⊳ Flight mode
- യ Mobile hotspot

Status

Network status



Public network

No Internet access

Your device is connected, but you might not be able to access anything on the network. If you have a limited data plan, you can make this network a metered connection or change other properties.

▲ Troubleshoot

Change connection properties

Show available networks

_

Change your network settings

- Ġ Data usage
- ۲ Proxy



1-3. After open changing adapter options, find Ethernet, click and select Properties. (If you want to check the wireless IP address, find WLAN)



1-4. Select "Internet Protocol Version 4 (TCP/IPv4)", click on "Properties".

Ethernet Properties	×
Networking Sharing	
Connect using:	
Realtek PCIe GBE Family Controller	
Configure This connection uses the following items:	
QoS Packet Scheduler	~
Internet Protocol Version 4 (TCP/IPv4)	
Microsoft Network Adapter Multiplexor Protocol	
Internet Protocol Version 6 (TCP/IPv6)	
Link-Layer Topology Discovery Responder	
Link-Layer Topology Discovery Mapper I/O Driver	~
2	
Install Uninstall Properties	
Description	
Allows your computer to access resources on a Microsoft network.	
OK Canc	el

1-5. To manually set IP address, select "Use the following IP address", set the IP address and subnet mask; Finally click on "ok". Take the IP address 192.168.0.10 as an example.

Internet		(TCP/IPv4)	Proper	ties					×
General									
You can g this capai for the ap	pet IP settin bility. Othe opropriate I	ngs assigned rwise, you n IP settings.	d autom need to	atically ask yo	if yo ur ne	ur net twork	work admin	supports istrator	
Oghta	ain an IP ac	idress autor	matically	/					
IP add	the followit ress:	ng IP addres	85:	192	. 168	. 0	. 10		
Sybnet	t mask:		[255	255	. 255	. 0		
Default	t gateway:		[
	ain DNS ser	ver address	autom	atically	,				
● Use	the followi	ng DNS serv	er addr	esses:					
Preferr	red DNS se	rver:	[
Alterna	ative DNS s	erver:	[•		
🗌 Valj	date settin	gs upon exi	t				Adv	anced	
						ок		Cancel	

1-6. When you don't need to set the IP address manually, Please select Obtain an IP address automatically and Obtain DNS Server address automatically.

Internet Protocol Version 4 (TCP/IPv4) Properties	×
General Alternative Configuration	
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	
Obtain an IP address automatically	
Use the following IP address:	
IP address:	
Subnet mask:	
Default gateway:	
Obtain DNS server address automatically	
O Use the following DNS server addresses:	
Preferred DNS server:	
Alternative DNS server:	
Validate settings upon exit Advanced	
OK Cancel	

Manually set IP address on Mobile phone



1-1. Click Settings on the screen-> Wireless Network (or Wi-Fi), click on the exclamation mark behind the wireless signal.

	😤 all 3il 🔳 53
< WLAN	0
WLAN	
Advanced settings	>
Choose network	
EX1200M_2.4G Can't access the internet	ŝ. ()
Dreadnaught	<u>ş</u> ()
Dreadnaught5G	ŝ ()

Note:

make sure the wireless terminal is currently connected or is connecting to the wireless signal manually set IP addre Bef

1-2. Click Static, enter the corresponding parameters in the IP address, gateway, and network mask positions, and click Save.

Take the IP address 192.168.0.10 as an example.

	ົຈຳ ແມ່ ເພື່ອ 53
< Static IP	ОК
Static IP EX1200M_2.4G	
IP settings	
IP address192.168.0.10	
Gateway192.168.0.1	
Netmask255.255.255.0	

DNS 1

DNS 2

1-3. When you don't need to set the IP address manually, Please turn off static IP.

Static IP EX1200M 2.4G	•
IP settings	
IP address 0.0.0.0	
Gateway 0.0.0.0	
Netmask 255.255.255.0	
DNS 1 0.0.0.0	
DNS 2 0.0.0.0	