

N600R QoS settings

It is suitable for : **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction:

Solution about how to configure QoS on TOTOLINK products.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

STEP-3:

Please go to **Qos ->Qos** page, and check which you have selected.

Select **Enable**, then Input **Total Uplink Bandwidth and Total Downlink Bandwidth**, then Click **Apply**.

You can fill in **IP Address** and **Total Uplink Bandwidth** and **Total Downlink Bandwidth** you want to restrain, then Click **Apply**

QoS

This page is used to set Quality of Service.

On/Off: **Enable**

Total Uplink Bandwidth: **100000** (100-100000Kbps)

Total Downlink Bandwidth: **100000** (100-100000Kbps)

Apply

Add a rule

IP Address: 192 . 168 . 0 . **Scan**

Uplink Bandwidth: (100-100000Kbps)

Downlink Bandwidth: (100-100000Kbps)

Comment:

Add

Current Qos List (The maximum entry count is 10)

ID	IP Address	Uplink Bandwidth	Downlink Bandwidth	Comment	Select
<input type="button" value="Delete"/> <input type="button" value="Clear"/>					