

How to log in CP900's setting interface?

It is suitable for : $CP900_V1$

Application introduction:

If you want to login to CP900's setting interface to configure some settings, please follow the steps below.

STEP-1: Client mode

1-1. Connect your computer to the router by cable or wireless

1-2. Setup you PC to get the IP automatically (Here I take system W10 for example)

1-3. Click on at the bottom right corner on the screen



1-4. Click [Properties] button in the lower left corner

🖗 Local Area (Connection Statu	S
General		
Connection		
IPv4 Connect	ivity:	Internet
IPv6 Connect	ivity:	No network access
Media State:		Enabled
Duration:		10:33:01
Speed:		1.0 Gbps
D <u>e</u> tails		
Activity		
	Sent — 📕	Received
Bytes:	21,919,167	382,914,115
Properties	Disable	Diagnose

1-5. Double click on "Internet Protocol (TCP/IP)".

Ethernet Properties	<						
Networking Sharing							
Connect using:							
🚍 Realtek PCIe GBE Family Controller							
Configure							
This connection uses the following items:							
Allows your computer to access resources on a Microsoft network.							
OK Cancel							

STEP-2:

Now you have two ways to configure the TCP/IP protocol below

2-1. Use the first default IP address 192.168.0.254:

Assigned manually IP address 192.168.0.x ("x" range from 2 to 253), the Subnet Mask is 255.255.255.0 and Gateway is 192.168.0.254.

Internet Protocol Version 4 (TCP/IPv4)	Properties ×
General	H
You can get IP settings assigned auton this capability. Otherwise, you need to for the appropriate IP settings.	natically if your network supports ask your network administrator
Obtain an IP address automatical	ly l
• Use the following IP address:	
IP address:	192.168.0.10
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	192.168.0.254
Obtain DNS server address autom	natically
• Use the following DNS server add	resses:
Preferred DNS server:	
Alternative DNS server:	· · ·
Validate settings upon exit	Ad <u>v</u> anced
	OK Cancel

Enter **192.168.0.254** into the address bar of your browser. Log in the settings interface.

	TOTOLINK	×				_		×
←	→ C 仚	() 192.168	.0.254/home.asp?timestam	ıp=15449		Q	. 9 ☆	r] :
	Apps For quick	access, place	your bookmarks here on the bo	ookmarks bar. Import bookmar	rks now			
	TDT The Smarte	D LIN	K			The Smartest Networ	k Device	
	CP900 (Firmwar	e V6.3c.971)					🤬 He	elp
5	Fast Match							
÷	System Status		Operation Mode					
8	Operation Mode		This page is used to char	nge Operation Mode.				
⊕	Network		Client mode	Repeater Mode	AP Mode AP AP	WISP Mode		
۲	Country code se	etting	SSID	TOTOLINK_CP9	00_5G			
Ģ	Wireless	٠	Channel	149 V				
۵	Management	+	Encryption	Disable •				
						F	nish	

Copyright @ 2018 TOTOLINK Ltd., All Rights Reserved

[Note]:

192.168.0.254 can only be used in AP mode and WISP mode; Client mode and Repeater mode please use his second IP address 169.254.0.254.

2-2. Use the second IP address 169.254.0.254:

Assigned manually IP address 169.254.0.x ("x" range from 2 to 253), the Subnet Mask is 255.255.255.0 and Gateway is 169.254.0.254.

Internet Protocol Version 4 (TCP/IPv4) Properties					
General					
You can get IP settings assigned auton this capability. Otherwise, you need to for the appropriate IP settings.	natically if your network supports ask your network administrator				
O <u>O</u> btain an IP address automatical	ly				
Use the following IP address:					
IP address:	169.254.0.10				
Subnet mask:	255.255.255.0				
Default gateway:	169.254.0.254				
Obtain DNS server address auton	natically				
• Use the following DNS server add	resses:				
Preferred DNS server:					
Alternative DNS server:					
Validate settings upon exit	Ad <u>v</u> anced				
	OK Cancel				

Enter **169.254.0.254** into the address bar of your browser. Log in the settings interface.



CP900 (Firmware V6.3c.971)								🤬 Hel
 Fast Match System Status Operation Mode 	Operation Mode This page is used to ch	ange Ope	ration Mode.					
Network	Client mode		Repeater Mo	de		Mode	0 w	ISP Mode
Management +	SSID BSSID Key Connect Status		Dreadnau 64 : E5 888888888 Connection	ught5G 99 : Fi 8 n successfully	4 : 1C	: E0		
	Site Survey List							Scan
	Channel	SSID	BSSID	Encryp	tion	Signal	Mode	Select

Copyright @ 2018 TOTOLINK Ltd., All Rights Reserved

[Note]:

169.254.0.254 supports login in Client mode, Repeater mode, AP mode and WISP mode.

STEP-3:

After the setup is successful, your computer must choose to obtain an IP address automatically to access the network. As the picture shows.

Internet Protocol Version 4 (TCP/IPv4) Properties	×
General Alternative Configuration	
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	
Ottain an IP address automatically	
Use the following IP address:	
IP address:	
Sybnet mask:	
Default gateway:	
• Obtain DNS server address automatically	
O Use the following DNS server addresses:	- 1
Preferred DNS server:	
Alternative DNS server:	
Validate settings upon exit Advanced	
OK Cancel	