

How to login to router by manually configuring IP?

It is suitable for : **All TOTOLINK routers**


Set up steps

STEP-1: Connect your computer


Connect to the router's LAN port with a network cable from a computer network port (or to search for and connect the router's wireless signal).

STEP-2: Assigned manually IP Address

2-1. If the router's LAN IP address is 192.168.1.1, please type in IP address 192.168.1.x ("x" range from 2 to 254) , the Subnet Mask is 255.255.255.0 and Gateway is 192.168.1.1.

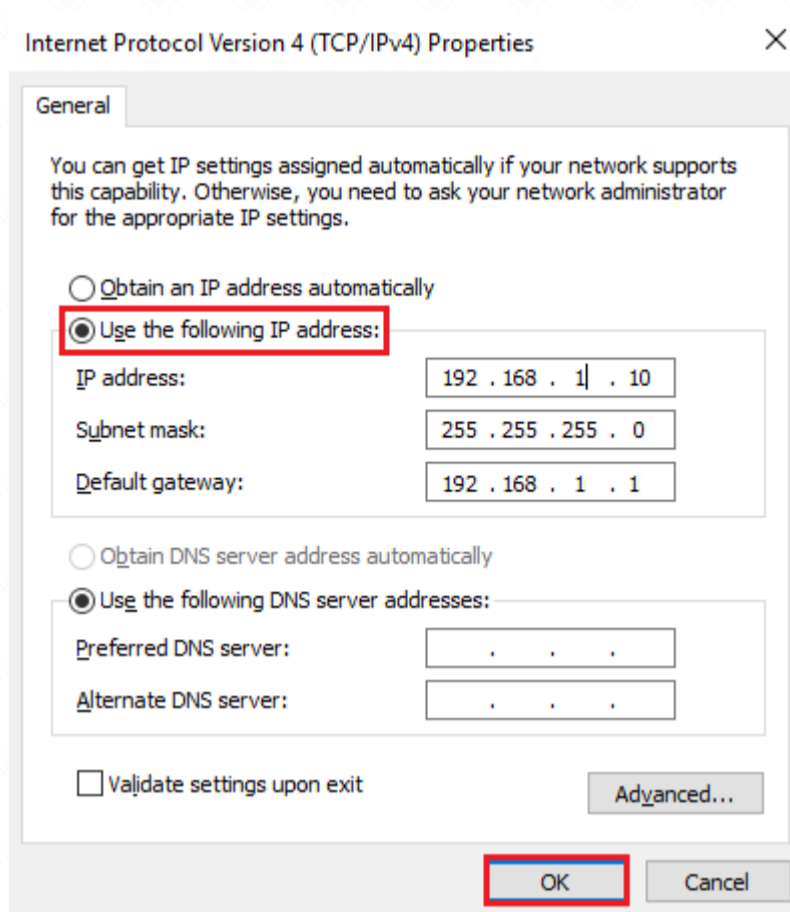


2-2. If the router's LAN IP address is 192.168.0.1, please type in IP address 192.168.0.x ("x" range from 2 to 254) , the Subnet Mask is 255.255.255.0 and Gateway is 192.168.0.1.

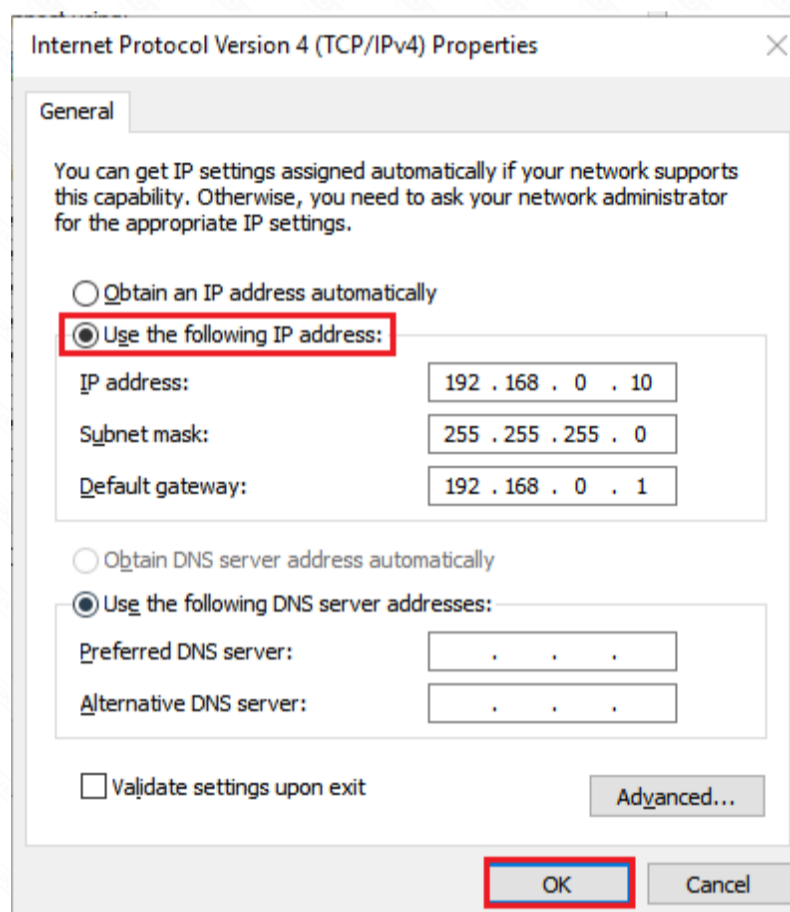


STEP-3:

Login to the TOTOLINK router in your browser. Take 192.168.0.1 as an example.

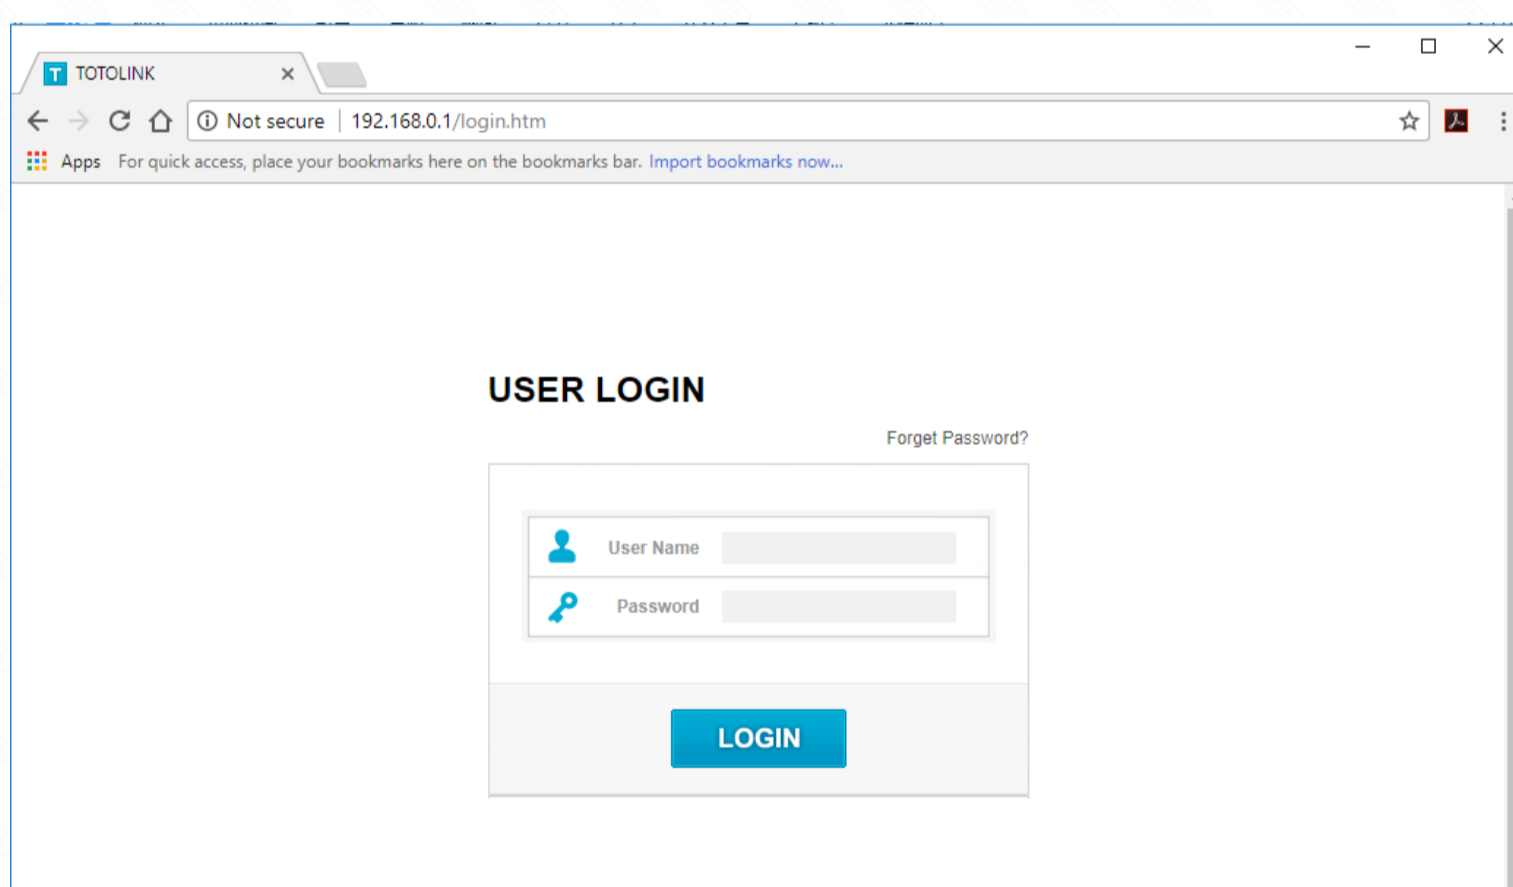

STEP-4:

After setting up the router successfully, please select Obtain an IP address automatically and Obtain DNS Server address automatically.

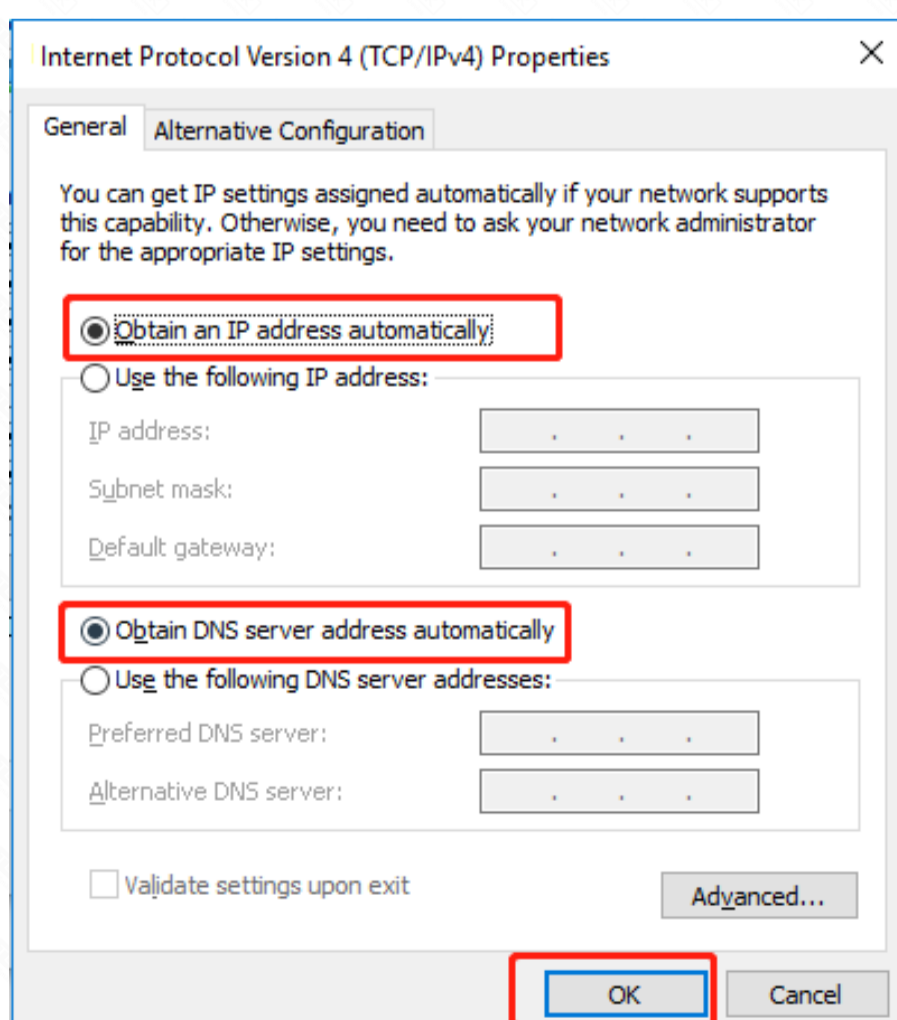

Note: Your terminal device must choose to obtain an IP address automatically to access the network.