


## EX200 Reset settings

It is suitable for: **EX200**

### Diagram

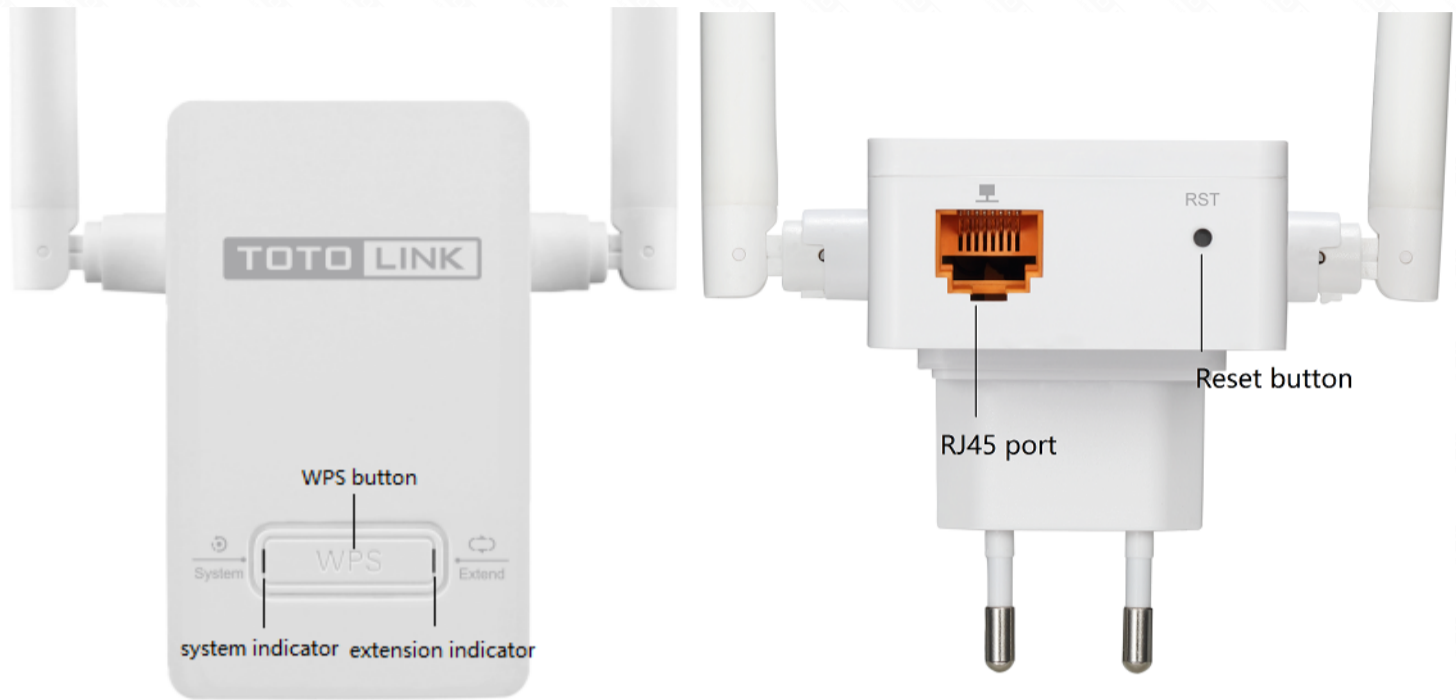

### Set up steps

Keep the extender power on, use a pin to press the RST button on the bottom of device. When System LED blink, release the button. The device will restore to factory default settings.

**RST button diagram :**



**System LED diagram:**



### FAQs

**Q1: Unable to login the management page when I want to configure the extender to repeat other router's signal, how to do ?**

--Reset the extender and then login the default gateway to configure the extender again.

**Q2: LED indicator introduction :**

LED light introduction					
	Power On	System started	Press WPS	Extended successfully	Press "RST" button for 5s
<b>System LED</b>	Blue	Blinking Blue ( 1s : 1s=On : Off )	Blue lights for 2min	Blinking Blue ( 1s : 1s=On : Off )	Blinking Blue ( 100ms : 100ms=On : Off )
<b>Ext LED</b>	Orange	System started ( no extension ) /extension fails		extended successfully	Data transmitting
		Off		On	On
1. System LED keeps blinking when pressing the "RST" button until releasing 2. System LED stays the current status when the system crashes.					