


How to set up static DHCP?

It is suitable for : **N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT, N300RH, N302R Plus, A702R, A850R, A3002RU**

Set up steps


STEP-1: Install router as the following diagram

The router WAN IP and TR069 server IP must be on the same network segment or can access each other; TR069 server needs to turn off the firewall and other functions.

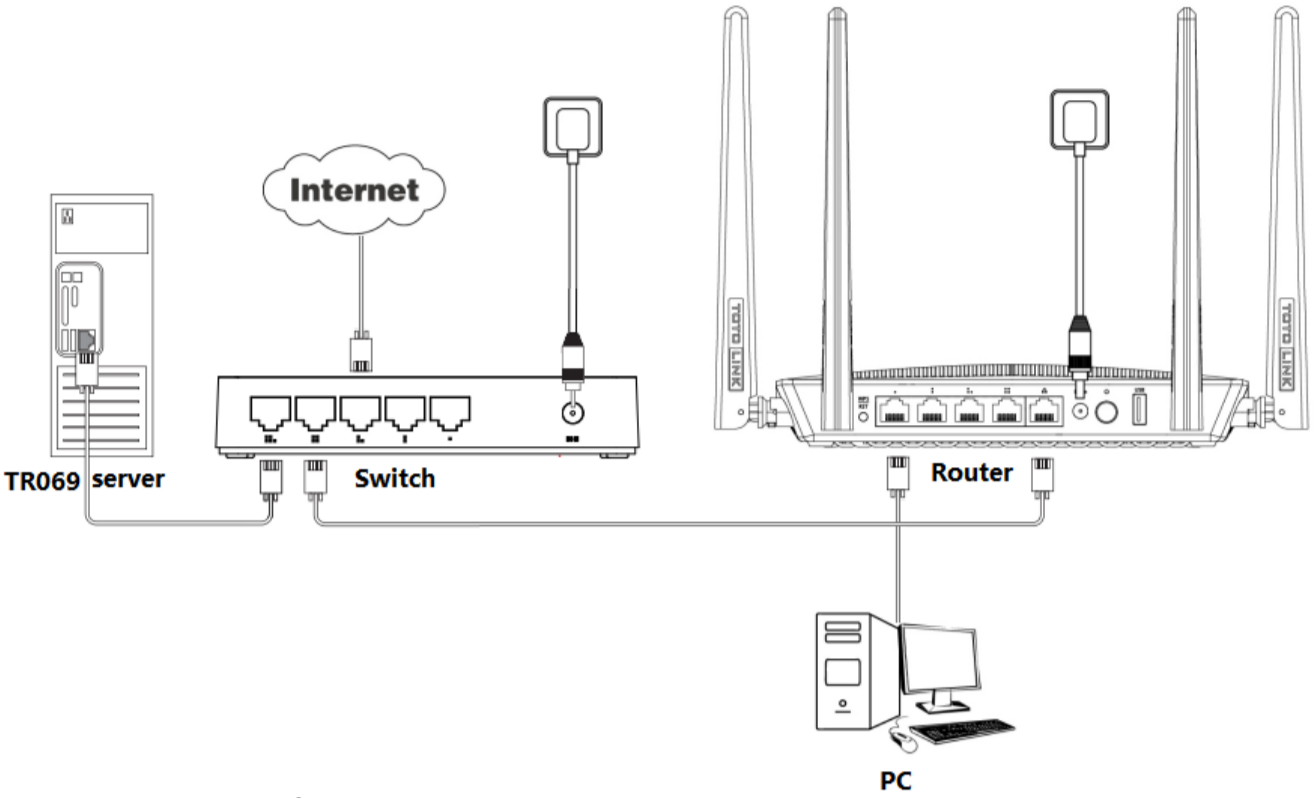


STEP-2: Login router

Access Login page (Default IP: 192.168.0.1) and then you need enter the Administrator information (Default ID and Password is admin).

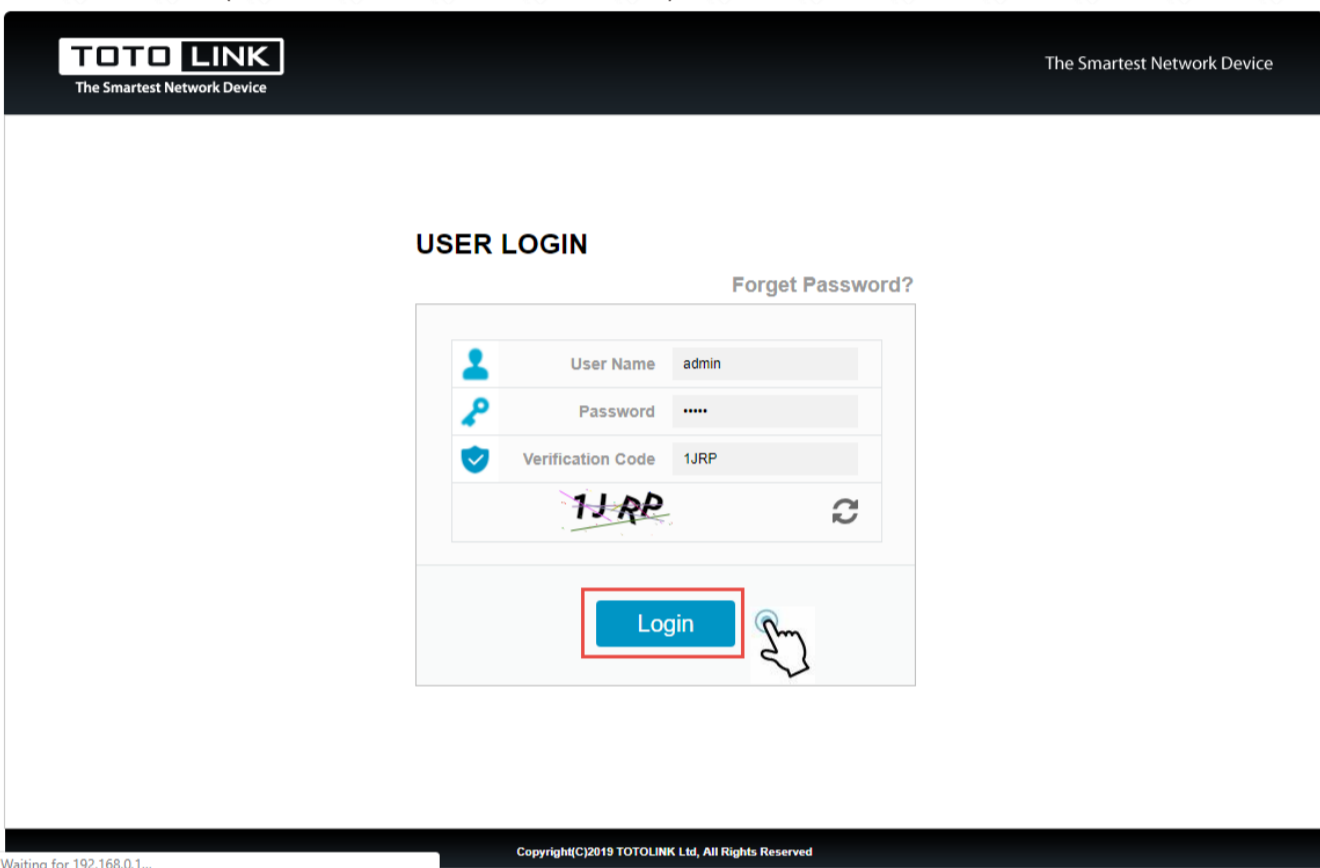


STEP-3: WAN settings

Go to the Advanced Setting page, setup the WAN information.

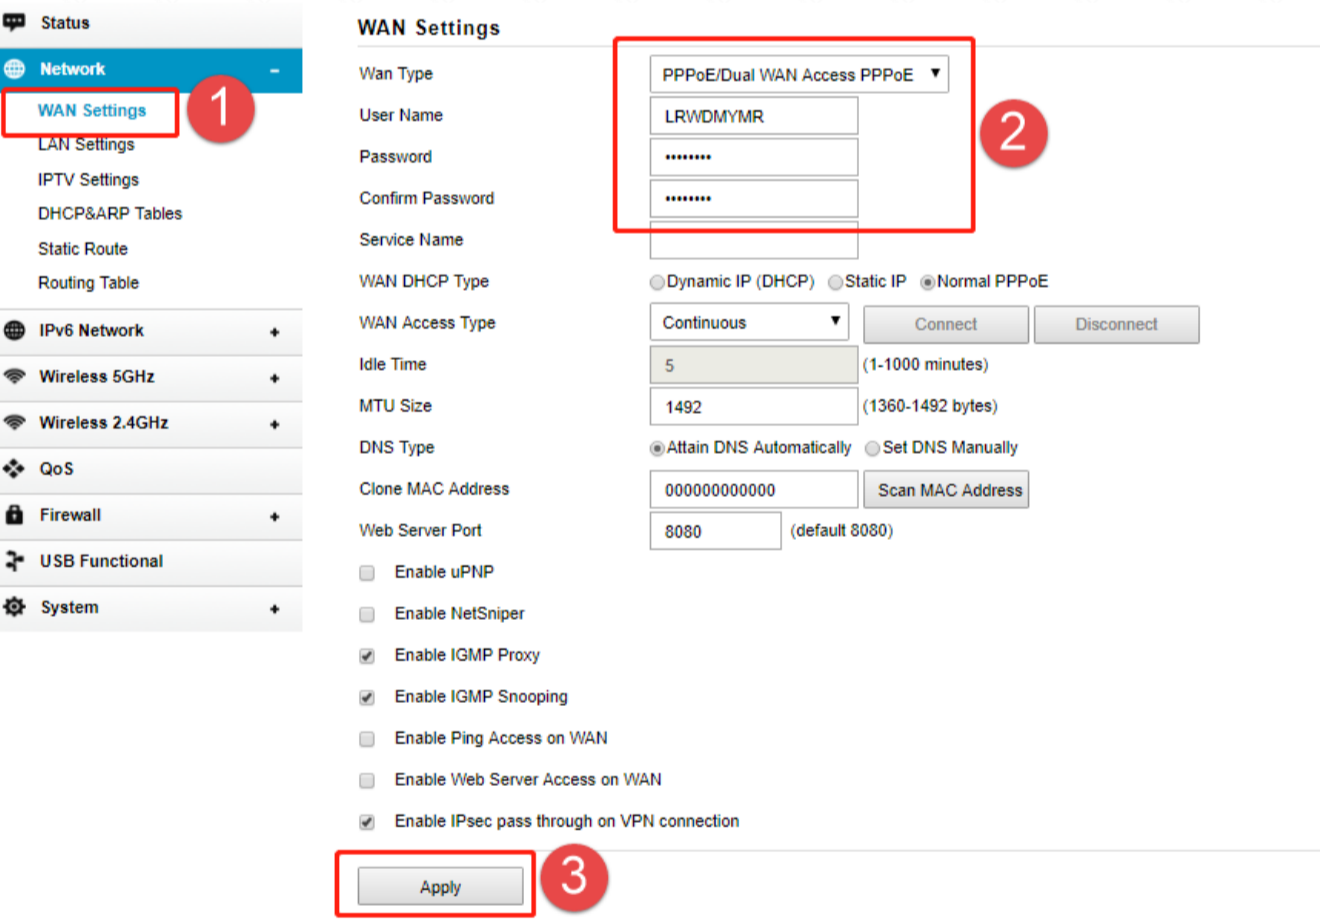

STEP-4: TR069 settings

Next, setup the TR069 information.

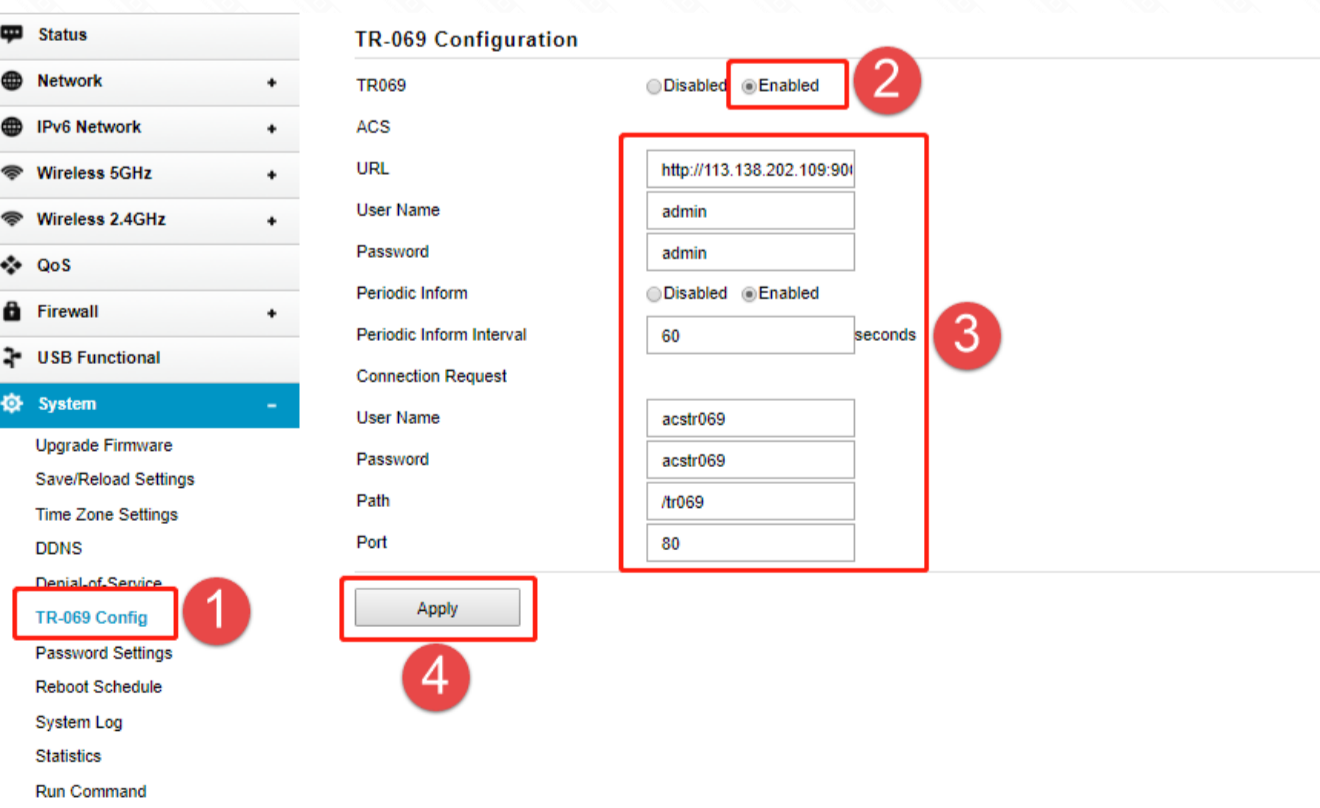

R069 – Connection Information

Information		Description
ACS	URL	Server ACS IP address.
	User Name	Account used to access the ACS server.
	Password	
	Periodic Inform	Notify the signal to connect between ACS server and Router periodically.
	Periodic Inform Interval	Signal notification interval to connect between ACS server and Router
Connection Request	User Name	Account for ACS server access the Router.
	Password	
	Path	Path to TR069 feature on Router.
	Port	Port access on Router.